AIRAID®

INTAKE SYSTEMS

#300-165 INSTALLATION INSTRUCTIONS
2005-06 Dodge Dakota/ 2006 Mitsubishi Raider
3.7L & 4.7L V-8

Thank you for purchasing the Airaid Intake System. Please read the instruction manual carefully before proceeding with the installation. Contact Airaid @ 800-498-6951 8:00 AM – 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid.

Thank you for selecting Airaid.

Packing List:

720-440	Airaid Premium Filter	1
KIT165DC	Quick Fit Panel	1
KITWSTRIP02	Weather Strip 28"	1
KIT165HP	Hardware & Instructions	1
- KITSNP24GHS	Speed clamp	1

Tools Required for this Installation:

Flat Blade Screwdriver
Or
5/16" Nut Driver

PROUDLY MADE IN THE USA

AIRAID NO HASSLE! WARRANTY

Installation Instructions. Read Me!

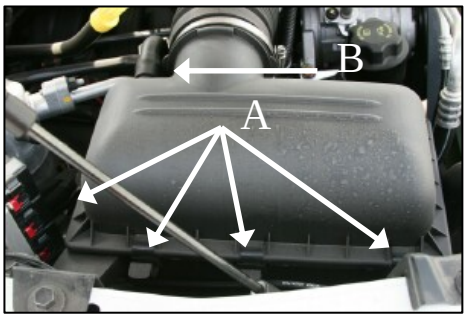

1. Disconnect the negative battery cable. ***A.)*** Un-hook the four clips that hold down the air cleaner lid. ***B.)*** Twist and remove breather hose from lid.

2. Loosen the hose clamp on the air filter box lid.

3. Slide the airbox lid forward and then lift up and remove from intake hose and vehicle.

4. Remove factory air filter from air filter box.

5. Install the Quick Fit Panel by sliding the five tabs on the back of the panel into the airbox base. Re-latch two hold down clips. Slide the factory intake tube onto the Quick Fit Panel and tighten the hose clamp.

6. Slide the speed clamp over the breather hose as shown.

7. Install the breather hose onto the Quick Fit Panel as shown and tighten the speed clamp.

8. Install the Airaid Premium Filter onto the Quick Fit Panel, and tighten the hose clamp.

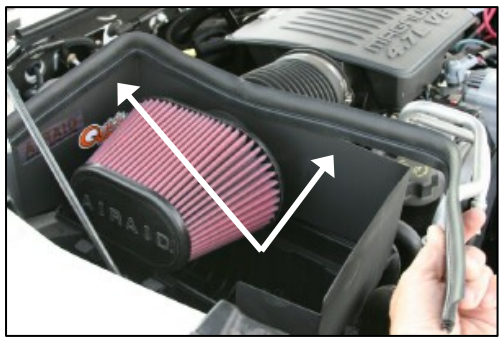

9. Install the weather strip on top of the Quick Fit Panel. *(Hint: start at one end and work your way to the other end.)*

10. Make sure there is no foreign material in the intake path. Double check your work for tightness. **Re-connect the negative battery cable.**

Before!

After!

Don’t Forget Your AIRAID Filter Tune-Up Kit!

P/N 790-550

Instructions Revision
Date: 4/26/06

Airaid Filter Co. 2688 E Rose Garden Ln. Phoenix AZ 85050 (800) 498-6951 AiraidInfo@airaid.com www.airaid.com